

 


- [Table of Contents](#)
- [How to Use This Manual](#)
- [Safety Precautions](#)
- ▶ [Printer Parts and Their Functions](#)
- ▶ [Using the Sheet Feeder and the Cassette](#)
- ▶ [Further Printing Techniques](#)
- ▶ [Printing Media](#)
- ▶ [Checking the Status of the Printer](#)
- ▶ [Routine Maintenance](#)
- ▼ [Troubleshooting](#)
 - [Cannot Install Printer Driver](#)
 - [Print Quality is Poor](#)
 - [Printer Does Not Start or Stops During Print Jobs](#)
 - [Paper Does Not Feed Properly](#)
 - [Paper Jams](#)
 - [The POWER Lamp Flashes Orange](#)
 - [An Error Message is Displayed on the Screen](#)
 - [Cannot Print Properly from the Digital Camera](#)
 - [Cannot Print Properly with Automatic Duplex Printing](#)
 - [Problems Relating to Windows](#)
- ▶ [Appendix](#)
- [Index](#)

The POWER Lamp Flashes Orange

An error has occurred in the printer. The number of flashes indicates the type of error, as outlined below. Check the cause and take the appropriate action.

When a printer error occurs, the **POWER/ERROR** lamp flashes. The number of flashes indicates the type of error that has occurred. Count the flashes and take the appropriate action to correct the error.



- **Two flashes: Printer is out of paper / Paper does not feed**
Reload paper to the Sheet Feeder or Cassette and press the **RESUME/CANCEL** button.
- **Three flashes: Paper jam/Paper Output Tray is closed**
If paper is jammed, remove the jammed paper, reload paper in the printer, and then press the **RESUME/CANCEL** button. If the Paper Output Tray is closed, open it.

See [Paper Jams](#)
- **Four flashes: Empty ink tank**
Press the **RESUME/CANCEL** button to resume printing with an empty ink tank. Replace it with a new ink tank immediately after the printing. It may damage the printer if you continue printing with an empty ink tank.

See [Replacing an Ink Tank](#)
- **Five flashes: Print Head not installed / Print Head not installed correctly / Print Head is defective**
Install the Print Head. If the Print Head is already installed, remove the Print Head and check the electrical contacts for foreign matter, then reinstall.

After reinstalling the Print Head, you may need to realign it.

If this error still remains, the Print Head may be damaged. Contact a Canon service representative.
- **Six flashes: Inner Cover error**
Close the Inner Cover. Then press the **RESUME/CANCEL** button to start printing.
- **Eight flashes: Waste ink absorber almost full**
The printer has a built-in waste ink absorber for the ink used during Print Head cleaning. Eight flashes indicates that the waste ink absorber is nearly full. Press the **RESUME/CANCEL** button to cancel the error so you can continue printing. Before the waste ink absorber becomes completely full, contact a Canon service representative.

Important Canon recommends that you call for service as soon as this error occurs. Once the waste ink absorber becomes completely full, printing will no longer be possible.
- **Nine flashes: A specified period of time has elapsed without**